

**USER INSTRUCTIONS TO BE READ IN CONJUNCTION WITH
OPERATORS HANDBOOK
GLOBALSTAR GSP 1600 CDMA/SAT PHONE**

The Globalstar GSP 1600 phone is a combined Satellite telephone that operates within the Globalstar Satellite and Telstra CDMA service.

It has only ONE number and it applies to both Satellite and CDMA modes.

The number of this phone is **0420 104 498**

The unit should be used in the CDMA mode when in a regional centre where CDMA is available, this reduces the cost of telephone calls.

In remote areas it should be used in the Satellite mode.

IN CDMA OPERATION

Turn unit on and hold power key until unit lights up and goes through test procedure.

Pull out the small antenna on the top right hand side.

(NOTE do not rotate Satellite antenna in CDMA mode)

The right hand side of the screen will indicate battery condition.

On the left hand side will indicate signal strength in bars with an antenna symbol.

Dial your number and push send, when call is finished push end.

The screen will show the minutes used.

IN SATELLITE MODE

Turn unit on and hold power key until unit lights up and goes through test procedure.

Rotate the Satellite antenna and fully extend it until it stops.

(NOTE in this mode you must have a clear view of the sky)

Hold the unit vertically until a satellite symbol appears in the left hand corner.

It also shows the signal strength in bars beside it.

The right hand side shows battery condition.

When all symbols show, dial the number the same as in CDMA mode, push the send key, it could take up to 3 minutes to connect and the ring tone may not sound like a digital phone, this however is part of Satellite phone operation.

When call is finished push end, the screen will show minutes used.

The unit can be held in either Satellite or CDMA mode by pushing and holding star and selecting the option required.

The phone will ring 1300/1800 numbers for RACV.

Do not add entries to the phone book.

BATTERY CHARGING

The unit comes with a mains AC charger and a DC cigarette lighter charger, when mains power or an inverter is available use the AC charger, when only 12 volts is available use the DC charging system.

When the battery is charging the bar graph shows the battery condition under charge on the left hand side of the screen.

If the battery is low the phone gives three beeps if you are on a call, and one beep every minute if you are not on a call.

A low battery sign appears on the screen.

Do not use the phone if the battery is low as the call may not be able to be completed.

In the Sat mode the talk time is 3.5 hours.

In the CDMA mode the talk time is 4.5 hours.

These times apply only if the battery is fully charged.